Quick Start Guide Belt-Drive Turntable

Guide de démarrage rapide Tourne-disque à entraînement par courroie

Kurzanleitung Riemenbetriebener Plattenspieler

Guida rapida Giradischi

Guía de inicio rápido Giradiscos de tracción por correa

Guia de início rápido Toca-discos acionado por correia

Краткое руководство по установке Проигрыватель с ременным приводом

快速启动指南 皮带传动唱盘机

快速入門指南 皮帶驅動式黑膠唱機

간편 사용 설명서 벨트 드라이브 턴테이블


User Manual (Online Manual)




Preparation

Use the included gloves to avoid fingerprints on the turntable


1 With the turntable turned off, set the platter.

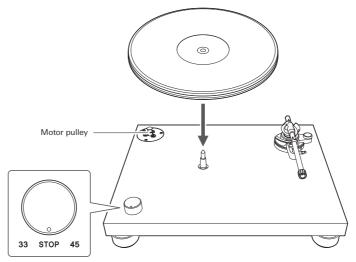


2 Attach the drive belt to the motor pulley.

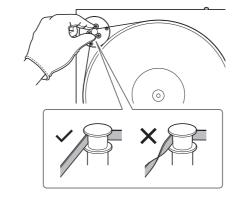

3 Level the turntable.

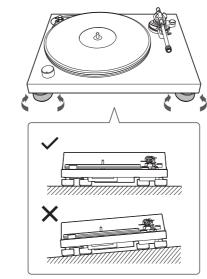

4 Insert the headshell into the tonearm, and remove the cartridge's protector.

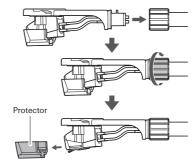


60th ANNIVERSARY

Quick Start Guide AT-LP2022



https://www.audio-technica.co.jp/document/AT-LP2022/ Default.html



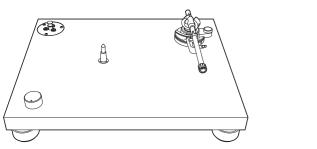


Turntable body

Contents





 Counterweight



45 RPM adapter AC adapter

RCA audio cable

Dust cover hinges



Replacement stylus (AT-VMN95SH CL)

Gloves



(For tonearm height adjustment)


Headshell with VM stereo cartridge




Hexagonal wrench






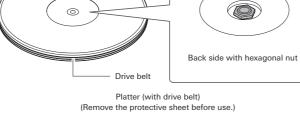


 ${\bf 5}\,$ Attach the counterweight to the back of the tonearm, and slowly turn it counterclockwise (to the left).

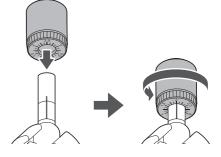

6 Unlatch the clamp.

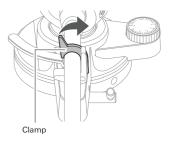

7 Turn the counterweight to adjust the tonearm's balance so that the tonearm is level when you release the headshell.

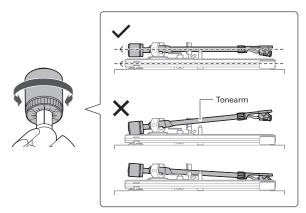


8 Set the tracking force gauge ring to the "0" position. After that, turn the counterweight and the tracking force gauge ring together counterclockwise (to the left) to the "2" position.




Tracking force gauge ring

9 Set the anti-skate control dial to "2", the same value as the tracking force value.

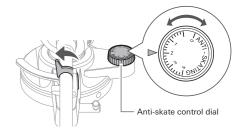

Connection

Connect the turntable to the PHONO input of a phono equalizer or an amplifier with a built-in phono equalizer.

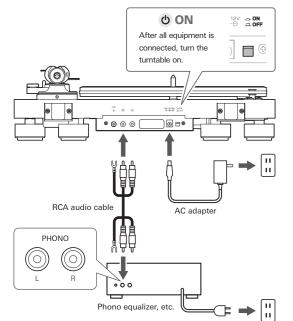

4 Position the tonearm over the desired location (groove) on the record.




 
5 Lower the tonearm by moving the tonearm lift control lever to the DOWN position.





4 Lower the tonearm by moving the tonearm lift control lever to the DOWN position and fix it with the clamp.

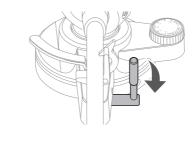




5 Turn the control knob to the "STOP" position.



 6 Attach the cartridge's protector.




7 Turn the turntable off.




Play

 
Remove the cartridge's protector.




2 Turn the turntable on, place the record, and use the control knob to select the speed.

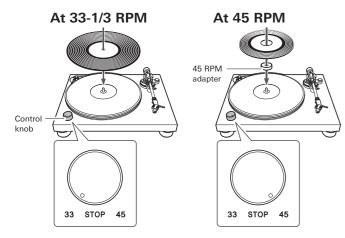


3 Raise the tonearm by lifting the tonearm lift control lever to the UP position.

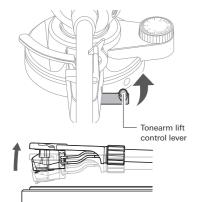

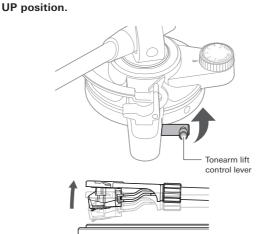



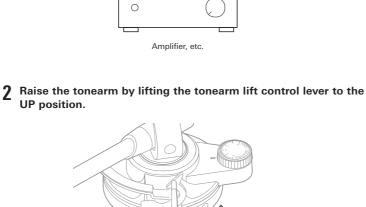

1 Lower the volume of the connected device (amplifier, etc.).

••))

Stop


Replacing the stylus

A replacement stylus (AT-VMN95SH CL) is included with the product.


1 With the turntable turned off and the AC adapter unplugged from the outlet, release the headshell from the tonearm.



 ${\bf 2}\,$ After removing the cartridge's protector, remove the stylus by pulling in the direction of the arrow without touching the cantilever, stylus tip, and magnets.

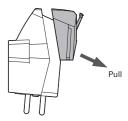

3 Mount the new replacement stylus to the cartridge.

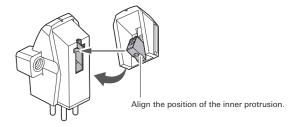

4 Mount the headshell onto the tonearm.




5 Adjust the tonearm balance and tracking force.

Cleaning

After turning the turntable off and unplugging the AC adapter from the outlet, clean the turntable as necessary.

For details about turntable and cartridge care accessories, visit https://www.audio-technica.com.

Stylus

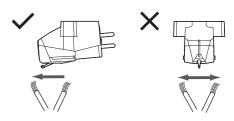

Record



Audio-Technica Corporation

2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan www.audio-technica.com ©2022 Audio-Technica Corporation

Global Support Contact: www.at-globalsupport.com