

AT4060a

Cardioid Condenser Tube Microphone

40 series studio microphones



Features

- **Vintage tube sound with the versatile performance necessary for the most demanding studio applications**
- **Hand-selected tubes are individually tested and aged to maintain peak performance**
- **Regulated and heavily filtered heater current prevents noise contamination of audio signal chain**
- **Wide dynamic range, low self-noise and high max SPL capability**
- **Large coupling transformer provides superior low-frequency linearity**
- **Dual-diaphragm capsule design maintains precise polar pattern definition across the full frequency range of the microphone**
- **The 2-micron-thick, vapor-deposited gold diaphragms undergo a five-step aging process so that the optimum characteristics achieved remain constant over years of use**
- **Precision-machined, nickel-plated brass, acoustic element baffle provides enhanced element stability and optimal sensitivity**
- **Custom shock mount provides superior isolation**

Description

The AT4060a is a large-diaphragm cardioid condenser tube microphone. It is designed for use in the most demanding studio applications.

Each hand-selected tube is individually aged and tested, then employed in a uniquely configured circuit for enhanced tube performance. Specially tuned elements improve dynamic range and the ability to handle high SPLs without sacrificing high-frequency characteristics. Floating-construction mounting of the elements provides isolation from noise and vibration.

The microphone operates in conjunction with the included tube microphone powering unit, which has low-impedance output and a ground-lift switch.

The cardioid polar pattern of the microphone is more sensitive to sound originating directly in front of the element, making it useful in controlling feedback, reducing pickup of unwanted sounds and providing isolation between performers.

The microphone includes a 7.6 m (24.9') output cable terminating in 6-pin XLR-type connectors for use between the microphone and the tube microphone powering unit.

The microphone is enclosed in a rugged housing. The included AT8447 shock mount provides superior isolation and permits mounting on any microphone stand with $\frac{5}{8}$ "-27 threads. A tube microphone powering unit, an AC power cable, rack-mount adapters for the tube microphone powering unit and a protective carrying case are also included.

Operation & Maintenance

The AT4060a does not require phantom power but operates in conjunction with the included tube microphone powering unit. The tube microphone powering unit has low-impedance balanced output (3-pin XLRM-type connector) and a ground-lift switch, which allows removal of hum caused by ground loops. The signal appears across Pins 2 and 3; Pin 1 is ground (shield). Output phase is "Pin 2 hot"—positive acoustic pressure produces positive voltage at Pin 2.

To avoid phase cancellation and poor sound, all mic cables must be wired consistently: Pin 1-to-Pin 1, etc.

The microphone includes an AT8447 shock mount to provide mechanical isolation and secure mounting. This effective shock mount fits $\frac{5}{8}$ "-27 threaded stands. To use, slide the microphone into the shock mount basket and tighten the thumb screw to secure the microphone.

To set up the microphone with the tube microphone powering unit:

- 1) Make certain the tube microphone powering unit is turned off.
- 2) Plug the included 6-pin cable (female connector) into the microphone; then plug the other end of the cable (male connector) into the tube microphone powering unit.
- 3) Connect the output of the tube microphone powering unit into your mixer or other audio interface (using your 3-pin XLR-XLR cable — not included). Do not turn on the phantom power.
- 4) Plug the AC power cable into an AC wall outlet.
- 5) Turn on the tube microphone powering unit.

Important: Always turn the tube microphone powering unit off when connecting or disconnecting any cables.

As with any sophisticated vacuum tube equipment, the AT4060a requires a period of warm-up time before use. Allow at least 15 minutes after switching on the tube microphone powering unit for the unit's electronics to stabilize.

A raised Audio-Technica emblem is on the front of the microphone. Position this side of the microphone toward the sound source.

In use, secure the cable to the mic stand or boom, leaving a slack loop at the mic. This will ensure the most effective shock isolation and reduce the possibility of accidentally pulling the microphone out of its mount.

Avoid leaving the microphone in the open sun or in areas where temperatures exceed 110° F (43° C) for extended periods. Extremely high humidity should also be avoided.

To reduce the environmental impact of a multi-language printed document, product information is available online at www.audio-technica.com in a selection of languages.

Afin de réduire l'impact sur l'environnement de l'impression de plusieurs langues, les informations concernant les produits sont disponibles sur le site www.audio-technica.com dans une large sélection de langue.

Para reducir el impacto al medioambiente, y reducir la producción de documentos en varios leguajes, información de nuestros productos están disponibles en nuestra página del Internet: www.audio-technica.com.

Para reduzir o impacto ecológico de um documento impresso de várias linguas, a Audio-Technica providência as informações dos seus produtos em diversas linguas na www.audio-technica.com.

Per evitare l'impatto ambientale che la stampa di questo documento determinerebbe, le informazioni sui prodotti sono disponibili online in diverse lingue sul sito www.audio-technica.com.

Der Umwelt zuliebe finden Sie die Produktinformationen in deutscher Sprache und weiteren Sprachen auf unserer Homepage: www.audio-technica.com.

Om de gevolgen van een gedrukte meertalige handleiding op het milieu te verkleinen, is productinformatie in verschillende talen "on-line" beschikbaar op: www.audio-technica.com.

本公司基於減少對環境的影響，將不作多語言文件的印刷，有關產品訊息可在 www.audio-technica.com 的官方網頁上選擇所屬語言及瀏覽。

本公司基于减少对环境的影响，将不作多语言文档的印刷，有关产品信息可在 www.audio-technica.com 的官方网页上选择所属语言和浏览。

자원절약, 환경보호를 위해 국문 사용 설명서는 인쇄하지 않았습니다.
제품정보는 www.audio-technica.com 에서 원하는 언어 선택 후에 다운로드 받으실 수 있습니다.

Specifications

Element	Externally polarized (DC bias) condenser
Polar pattern	Cardioid
Frequency response	20-20,000 Hz
Open circuit sensitivity	-34 dB (19.9 mV) re 1V at 1 Pa
Impedance	200 ohms
Maximum input sound level	150 dB SPL, 1 kHz at 1% T.H.D.; 149 dB SPL, 1 kHz at 0.5% T.H.D.
Noise¹	19 dB SPL
Dynamic range (typical)	131 dB, 1 kHz at Max SPL
Signal-to-noise ratio¹	75 dB, 1 kHz at 1 Pa
Power requirements	AT8560a tube microphone powering unit (100-240V AC) (120V AC for USA/Canada)
Weight	Microphone: 645 g (22.8 oz) Tube microphone powering unit: 1.3 kg (2.87 lbs)
Dimensions	Microphone: 215.0 mm (8.46") long, 53.4 mm (2.10") maximum body diameter Tube microphone powering unit: 212.0 mm (8.35") W x 131.5 mm 5.18") D x 46.0 mm (1.81") H
Output connector	3-pin XLRM-type (on tube microphone powering unit)
Cables	7.6 m (24.9') cable with 6-pin XLR-type connectors for use between microphone and tube microphone powering unit; AC power cable
Accessories furnished	AT8560a tube microphone powering unit; AT8447 shock mount for 5/8"-27 threaded stands; rack-mount adapters for tube microphone powering unit; protective mic carrying case

In the interest of standards development, A.T.U.S. offers full details on its test methods to other industry professionals on request.


1 Pascal = 10 dynes/cm² = 10 microbars = 94 dB SPL

¹ Typical, A-weighted, using Audio Precision System One.


Specifications are subject to change without notice.



frequency response: 20–20,000 Hz

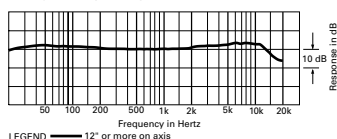

polar pattern

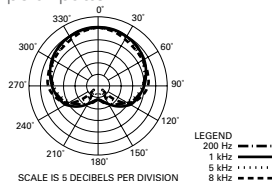

 **audio-technica**

Audio-Technica Corporation
audio-technica.com ©2013 Audio-Technica

P52482